



## **GOLDSTRIKE™ REAR FENDER EXTENSION KIT** **WITH FENDER FILLER STRIPS**

Parts Included:	1	Rear fender extension
	1	Fender extension bracket
	1	Fender extension hardware kit
	1	Left fender filler strip
	1	Right fender filler strip
	1	Fender filler strip hardware kit

### **INSTALLATION INSTRUCTIONS:**

1. Park on a level surface and shut off the motorcycle. Ensure the engine has time to cool before installation.
2. Remove rear fender by removing the screws next to the license plate light with a 5mm allen (Fig 1.), and pull the fender from the motorcycle. Carefully unplug the license light electrical connector near the top of the fender.
3. Remove license plate from fender.



Note: It may be easiest to work on a bench or table for steps 4-14.

4. Determine the left and right filler strips then slide them onto the edge of the fender panel. The holes go to the front of the bike inside the fender with the notches at the top.(Fig.2)
5. Make sure the filler strips are pushed fully onto the fender along their entire length. Adjust position if needed for an even fit.
6. Mark holes with a center punch, remove filler strips, drill 3/32" holes at each location. (Fig.3)
7. Reinstall filler strips, align holes, and position backplates.
8. Drive screws with washers into position, do not overtighten. (Fig.4)



### **WARNING:**

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

### **CAUTION:**

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

### **ATTENTION:**

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

### **NOTE:**

Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure.

Ciro will have no obligation if the customer cannot show proof of purchase.

Warranty will not be granted unless the part is properly installed and maintained.

Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products.

Please visit our website [Ciro3D.com](http://Ciro3D.com) for our complete warranty policy.



**Fig.3**




**Fig.4**

9. Position mounting bracket in place over the ten pull through darts.
10. Lubricate the darts with soapy water and pull them through the mounting bracket with a pair of pliers. (Fig.5)
11. Slide lower extension onto the bottom edge of fender. Make sure the extension is fully pushed onto fender.  
Adjust position for an even fit along entire width. (Fig.6)
12. Hold the mounting bracket tightly to the rear fender and mark the four mounting holes.
13. Carefully, drill four 1/4" holes through fender.
14. Install M6 screws with washers and locking nut to secure mounting bracket to the fender, do not overtighten.
15. Reinstall license plate. Reinstall fender, connecting and tucking wire into place. Reinstall screws removed in Step 2.




**Fig.5**

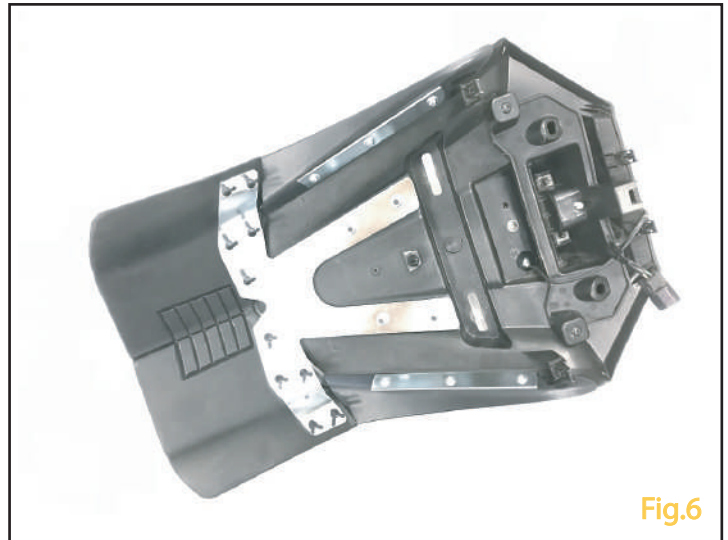

**Fig.6**

**Optional step:**

If using a trailer hitch, the receiver might need to pass through the fender extension. We have provided some scored lines on the back side of the fender extension to help with trimming. Trial and error may be needed to determine just how much trimming is required. Be sure to start with a minimal amount of trimming and work from there. Multiple test fits on the motorcycle may be required. (Fig.7)

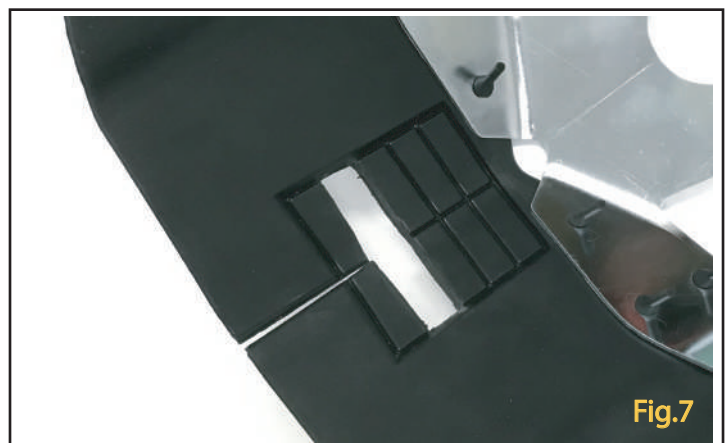

**Fig.7**