



Auxiliary Light Mounting Bracket  
2018 Honda Gold Wing  
LAH.01.10500


**Thank you for choosing DENALI**  
We know you would rather be riding your bike than wrenching on it, so we go the extra mile to make sure our instructions are clear and as easy to understand as possible. If you have any questions, comments, or suggestions don't hesitate to give our gear experts a call at 401.360.2550 or visit [WWW.DENALIELECTRONICS.COM](http://WWW.DENALIELECTRONICS.COM)

**Please Read Before Installing**  
DENALI products should always be installed by a qualified motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. DENALI takes no responsibility for damages caused by improper installation. **Caution:** When installing electronics it is extremely important to pay close attention to how wires are routed, especially when mounting products to the front fender, front forks, or fairing of your motorcycle. Always be sure to turn the handlebars fully left, fully right, and fully compress the suspension to ensure the wires will not bind and have enough slack for your motorcycle to operate properly.

**Installation Tips**  
We strongly recommend using medium strength liquid thread locker on all screws, nuts, and bolts. It is also important to ensure that all hardware is tightened to the proper torque specifications as listed in your owner's manual. For included accessory hardware please refer to the default torque specifications provided below. Inspect all hardware after the first 30 miles to ensure proper torque specifications are maintained.

| Bolt Size | in-lbs      | ft-lbs      | Nm      |
|-----------|-------------|-------------|---------|
| M3        | 10.0 in-lbs | -           | 1.0 Nm  |
| M4        | 23.0 in-lbs | -           | 2.5 Nm  |
| M5        | 44.5 in-lbs | 3.5 ft-lbs  | 5.0 Nm  |
| M6        | 78.0 in-lbs | 6.5 ft-lbs  | 9.0 Nm  |
| M8        | -           | 13.5 ft-lbs | 18.0 Nm |
| M10       | -           | 30.0 ft-lbs | 41.0 Nm |
| M12       | -           | 52.0 ft-lbs | 71.0 Nm |

**Hardware Sizing Guide**  
Not sure what size bolt you have? Use this ruler to measure screws, bolts, spacers, etc. Remember, the length of a screw or bolt is measured from the start of the "mounting surface" to the end of the screw, so only include the screw head when measuring countersunk screws.

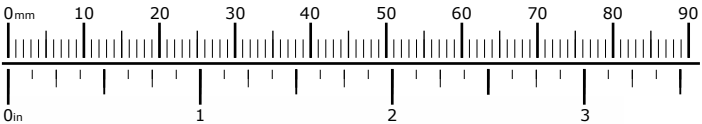

What's In The Box?




Kit Contents

- (a) Bracket.....Qty 2
- (b) M5x40 ISO 7380.....Qty 2
- (c) Large Spacer, ID 6.53, OD: 5.56, L: 22.225.....Qty 2
- (d) Small Spacer, ID: 5.56, OD: 9.53, L: 3.175.....Qty 2
- (e) M5 Lock Washer DIN 6797.....Qty 2

# 1. Installing The Light Mount


DENALIELECTRONICS.COM

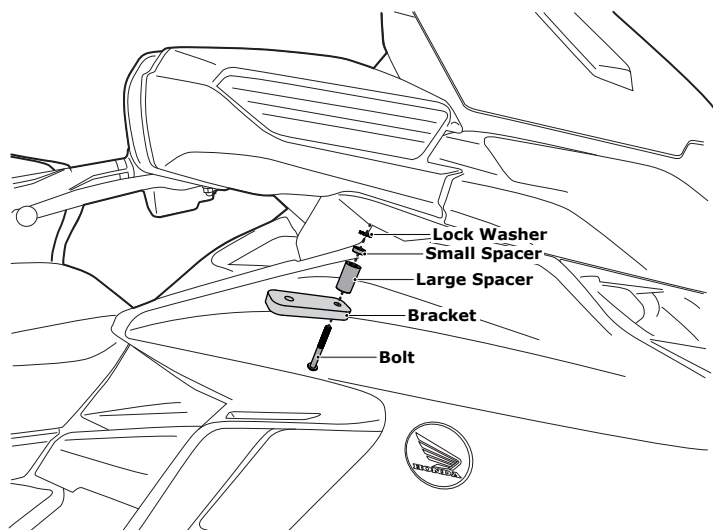

## 1.1 - Installing The Bracket

**Step One:** Remove the OEM M5 bolt from the underside of the mirror.

**Step Two:** Use the Bolt (b), Large Spacer (c), Small Spacer (d) and Lock Washer (e) to attach the Bracket (a) to the underside of the mirror.

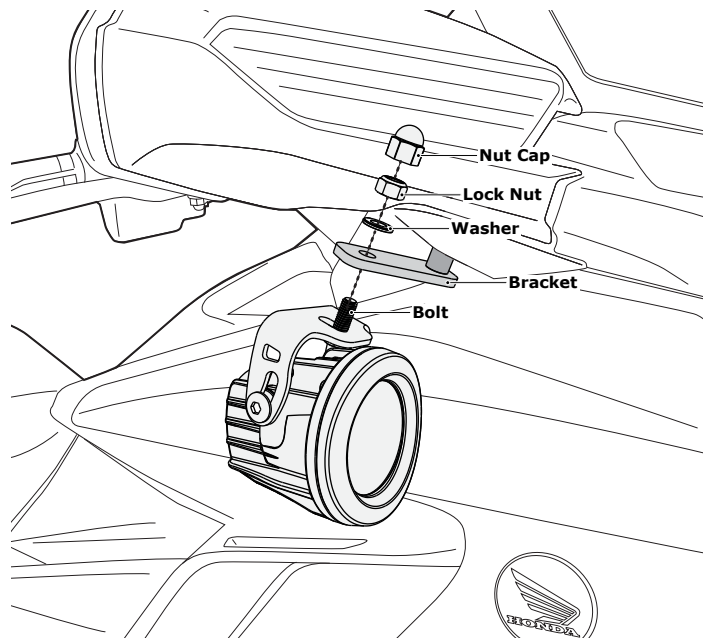

## 1.2 - Mounting The Light

**Step One:** Use the hardware supplied with the light pod to attached the pod to the bracket (a).

Repeat steps on opposite side of motorcycle.