



FANG® HEADLIGHT BEZEL FOR INDIAN CHIEFTAIN

- WARNING** This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.
- CAUTION** This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.
- ATTENTION** This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation. Read completely and understand the instructions prior to starting installation.

NOTE: Ciro products are designed and manufactured under very strict quality control. Ciro warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a limited lifetime warranty against LED failure. Ciro will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed, unmodified and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visit Ciro3d.com for our complete warranty policy.


Included Items:







Installation Instructions:

NOTE: You will need part # 46019 Lighting controller for Indian to perform this install. (Sold separately)

1. Park on a level surface and shut off motorcycle. Ensure the engine has time to cool before installation. Protect painted surfaces to prevent accidental damage to motorcycle. You will need to remove the seat and side covers to proceed.
2. Remove OEM bezel cover. Use a nylon wedge to separate enough to pull from the top and it will snap off. Fig. 1
3. Run the left and right side wires of the bezel through holes in the fairing on the left and right side of the fairing below the headlight. Ensure they pass through free and clear on either side. Fig. 2
4. Note the two teeth at the bottom of the bezel (Fig. 3). Putting these in place first hold down bezel and push in at the top until it snaps into place. Fig. 4
5. Two extension cables provided run from the connector at the light back to the connection at the controller. Fig. 5
6. Connect extension cable at the front (Fig. 6) and run the cable under the tank toward the back. Do this on the other side as well.
7. Place provided wire keepers behind at the front of the tank and underneath at the rear indicated in Fig. 7. Attach a cable tie loosely around cable and through the keeper at the rear first and then determine how much slack to leave at the front to allow front wheel to turn freely. Add cable tie at the front and tighten both.

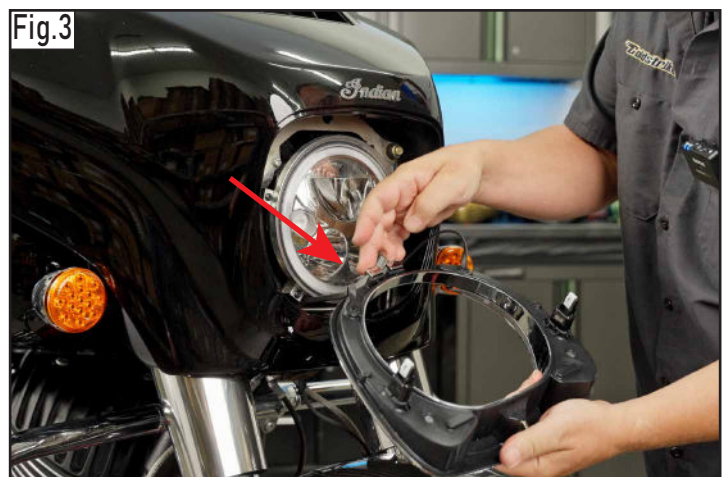

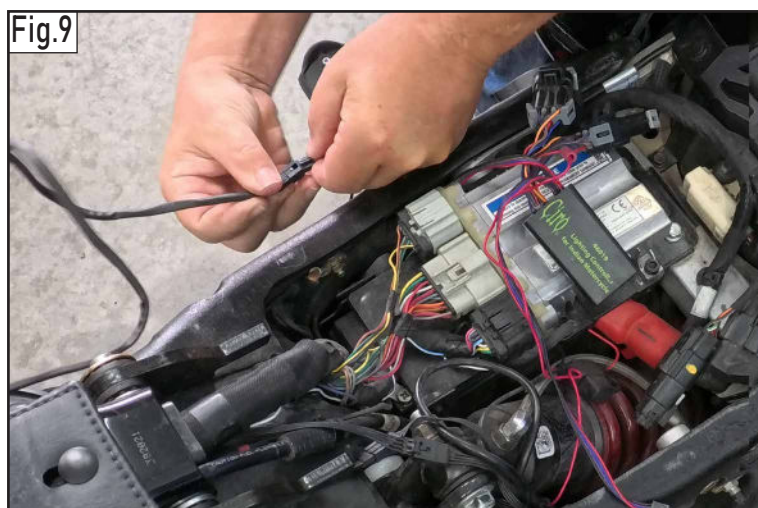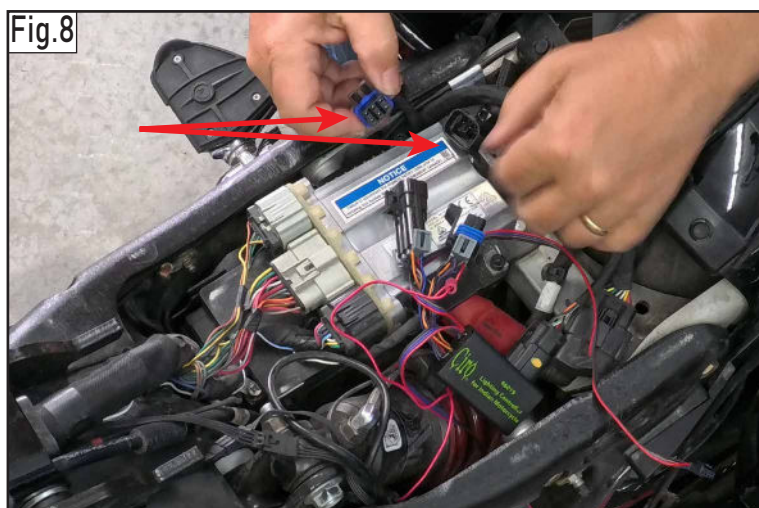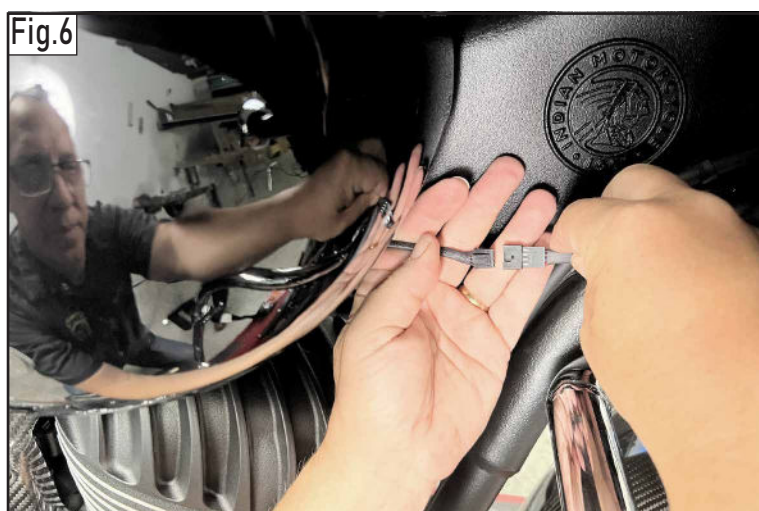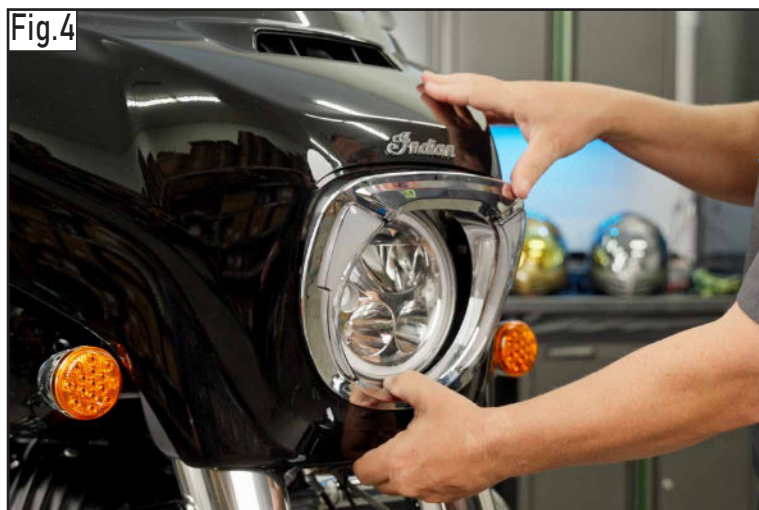

8. Disconnect light harness shown in Fig. 8 and insert the lighting controller. Fig. 8

9. Plug the cables from the light into the right and left sides of the controller. Fig. 9 Note that the right side of the controller wire set will have a brown wire and the left side will have a purple wire. Test to make sure turn signal operate as designed and secure all wires with remaing cable ties and keepers and stow controller in the center space to prevent any pinching of wires. Replace side covers and seat.

NOTE: If additional lights are to be added noe or later two Y splitters are provided in the kit to add between the controller and the new and existing lights.