Instruction Manual

Thank you for choosing [

We know you would rather be riding y
mile to make sure our instructions a
you have any questions, comments
experts a call at 401.360.2550 or vis

Please Read Before Insta

DENALI products should always be
you are unsure of your ability to pr
installed by your local motorcycle de
caused by improper installation. **Cau**
important to pay close attention to
products to the front fender, front fo
to turn the handlebars fully left, fu
ensure the wires will not bind and h
properly.

Installation Tips

We strongly recommend using med
nuts, and bolts. It is also important
proper torque specifications as listed
hardware please refer to the default
hardware after the first 30 miles
maintained.

Bolt Size	in-lbs
M3	10.0 in-lbs
M4	23.0 in-lbs
M5	44.5 in-lbs
M6	78.0 in-lbs
M8	-
M10	-
M12	-

Hardware Sizing Guide

Not sure what size bolt you have? Us
Remember, the length of a screw or
surface" to the end of the screw, s
countersunk screws.

LAH.11.10700
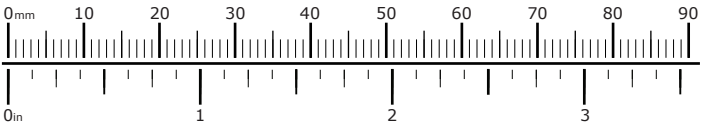Triumph Tiger 660 Sport
Front DM, D2 Mounting Bracket

What's In The Box?

(a)   (b)

Kit Contents

(a) Bushing...(LAH.11.008)...Qty 2

(b) Mounting Bracket...(LAH.11.007)...Qty 2

(c) M8x55 Socket head screw DIN 912..Qty 2

Compatibility: DM, D2

Tools Required: 6mm Hex

1. Installing The Light Mount
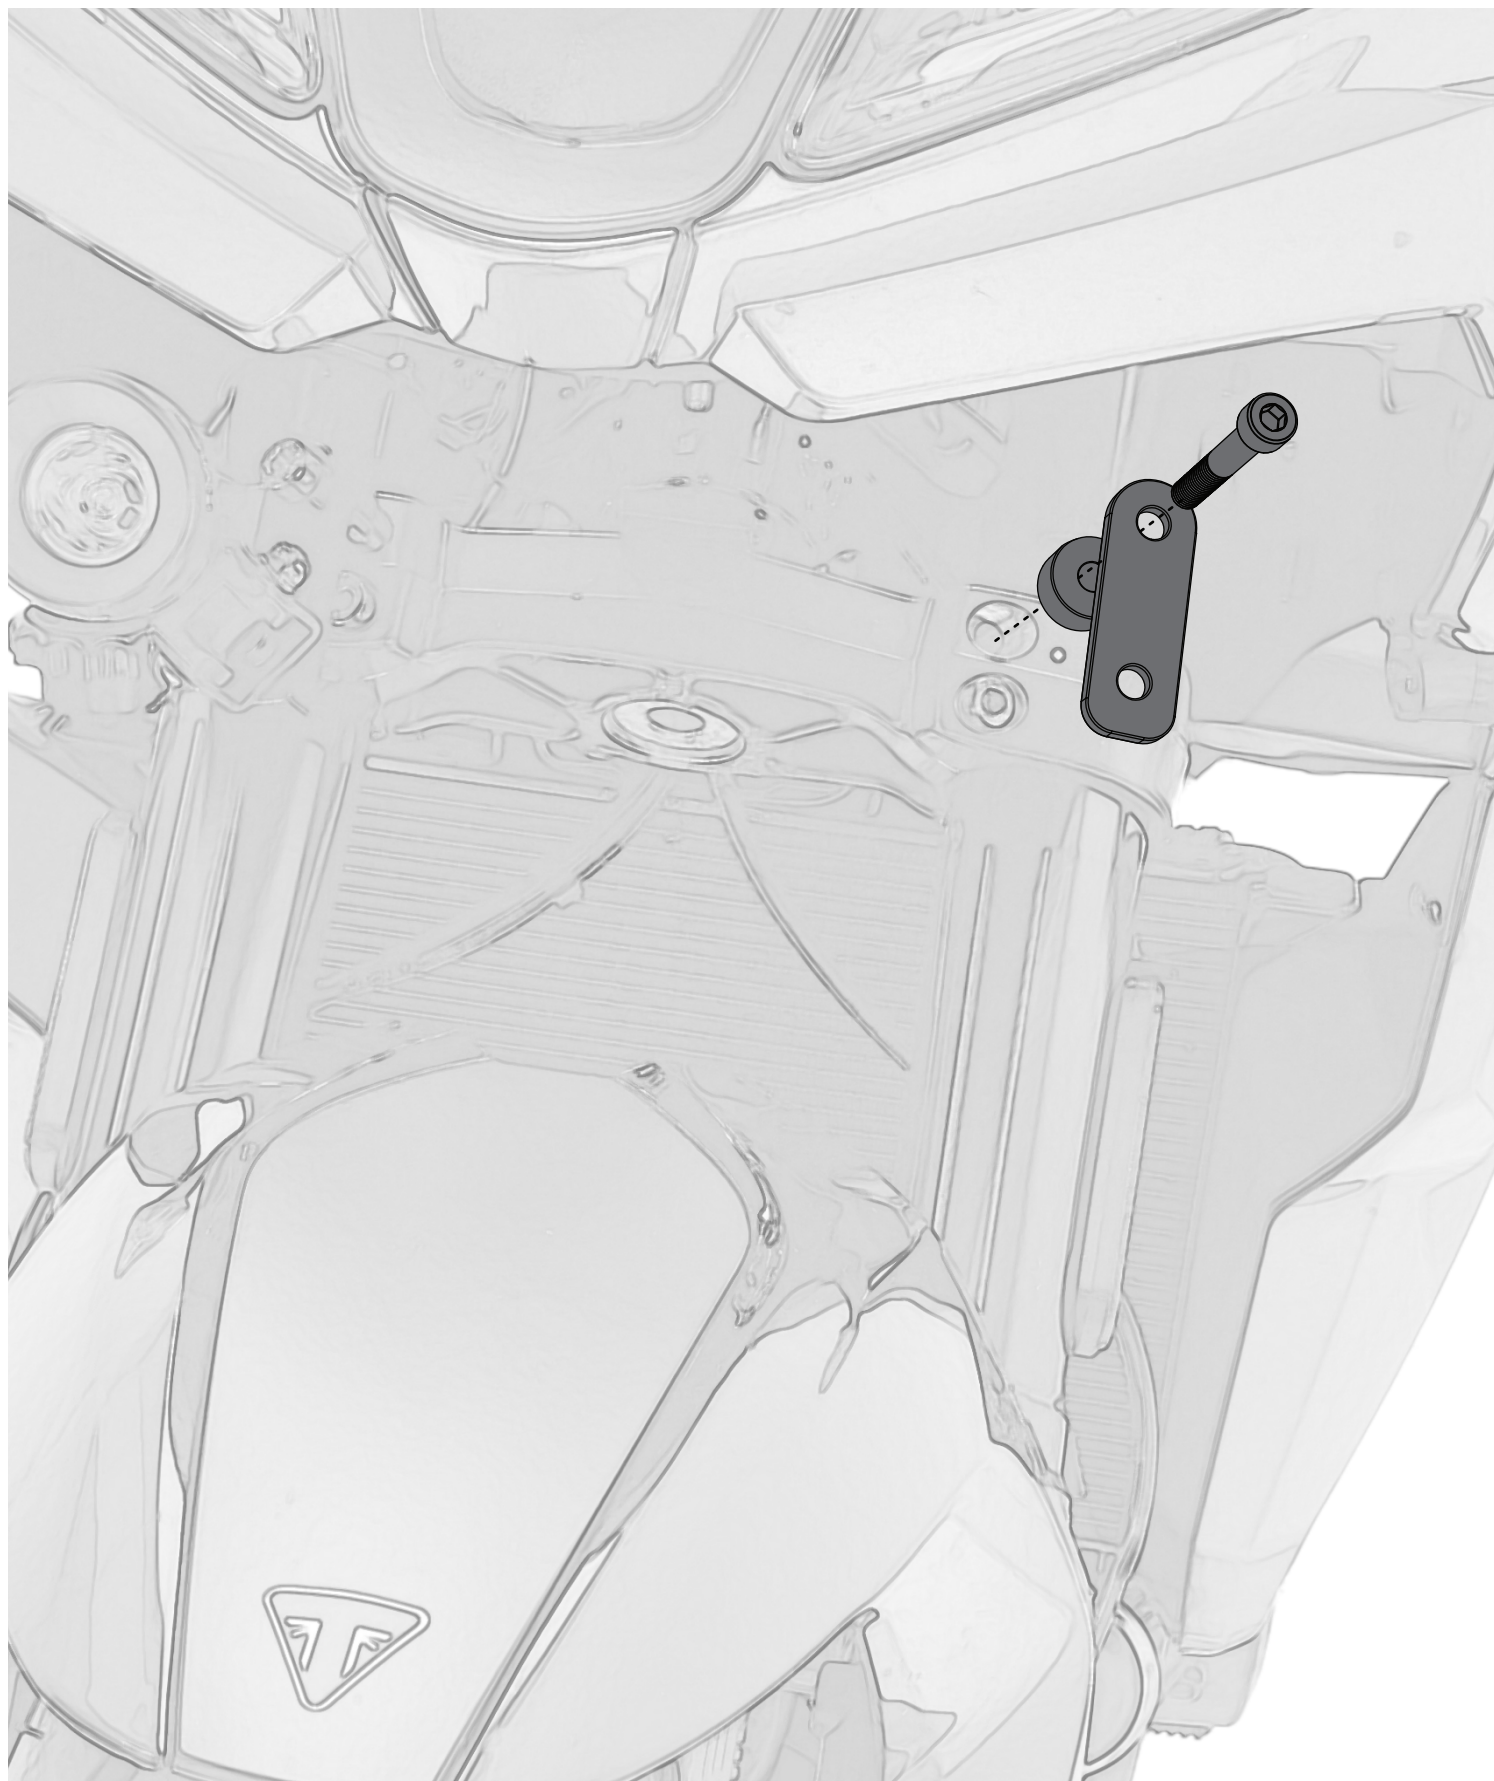
1.1 - Location Prep & Installation

Step One: Locate the mounting points on the upper triple tree and remove the top factory bolt from the fork clamp.

Step Two: Secure the Bushing (a) and Bracket (b) to the mounting location with the provided M8 x 55mm Socket Head Screw (c).

Note: The Bracket should be mounted in line with the fork with the round side pointed up.

Step Three: Mount your DM or D2 LED Light Pod to the open mounting hole on the bottom of the installed bracket (b). The mounting hinge on the pod should be rotated backwards and the pod itself should be rotated out towards the turn signal and positioned evenly spaced between the top and side fairing. See the photo for position reference.